



INSTRUCTIONS
AquaTwin 2 station
handwash
PN23355 – AquaTwin

Introduction

Satellite portable restrooms and accessories must be assembled according to approved assembly procedures. Variations in assembly could adversely affect product life and warranty.

TOOLS: ●Drill or screwdriver (*Angled cordless drill recommended*) ●socket & wrench ●Phillips driver bit

LIST OF PARTS

Item	PN	Description	Qty
1	23370	Pyramid-shaped foot plate	2
2	23369	Back plate	1
3	23368	Bottom plate	1
4	NEW	Screws (for structure)	11
5	16304	5.5 cm small clear 3/8" hose (tubing)	5.5cm
6	16304	15 cm medium long clear hose	15cm
7	16304	36 cm long clear hose	36cm
8	34037	Dispenser bulk soap	2
9	20621	Slimmate II Dgry	2
10	8150-605	Paper towel dispenser	2
11	23371	TS Fitting – 10mm hose (T-piece)	1
12	22320	screw M5 0.8 x 40 pn stainless	1
13	20903	Nut #10-24 nyloc stainless	1
14	11361	Washer 3/16 ID	2
15	19978	Screw -4.8mm x 16mm TAP (for dispensers)	12



1) Slide the first pyramid-shaped foot into the back plate, from the bottom.

2) Slide the second one in too.



3) Put the bottom plate on, by sliding it onto the bottom ends of both feet.



4) Now using six long screws, fix the bottom plate to the feet from underneath, using the 6 pre-drilled holes in the bottom plate. Make sure the heads of the screw don't stand out, tighten them enough.



5) Now fix the bottom plate to the back plate using three long screws.



6) Stand the structure up. Fix the pyramid feet to the back plate using two long screws on each side. Use the pre-drilled holes as guides. Make sure to hold both sides of the support foot in place, so the screw goes through both sides of the end of the support foot and through the back plate



7) Now take one of the 2 slimmate handwash sinks, the one marked with the green dot. This will be your fresh water sink.



8) Turn it around. Now take the shortest of the 3 clear hoses and push it into the connector at the bottom of the slimmate tank. Push the hose in far enough to make sure it locks in this Quick Connect coupler.



9) Now take the T-piece, put the medium length clear hose onto one end and push the other end of the hose onto the free Quick connect coupler on the footpump. Then connect the smallest clear hose to the center port of the T-piece. Make sure all hoses are well inserted and connected.



10) Take the longest piece of clear hose and connect it to the remaining port of the T-piece.



11) Put the black hose through the slot in the back plate so it comes through on the other side.




12) Put the end of the long clear tube through the hole at the bottom of the plate.





This is how the hoses should come through on the other side of the back plate.





13) Put the other slimmate handwash sink (the one with the red sticker) onto the other side of the AquaTwin structure. Take the basin off. Now feed the black hose into the tank of this second slimmate, through the hole at its back. Make sure to angle the hose down so it doesn't point upward. This second slimmate is being used as the used water tank for the 2-station sink.

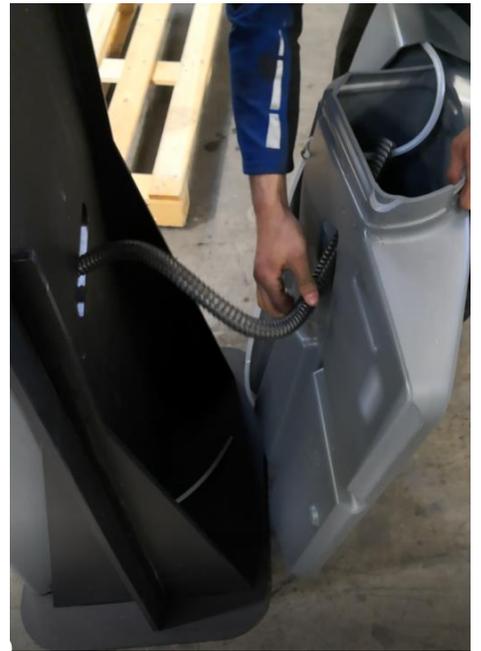

14) Now take the clear hose and connect it to the free port of the footpump on this second slimmate. This is a little more difficult to do, because the clear hose length is just the right length to prevent it from kinking or breaking. Both footpumps are now connected and will feed from the same fresh water tank, that of the 1st slimmate.

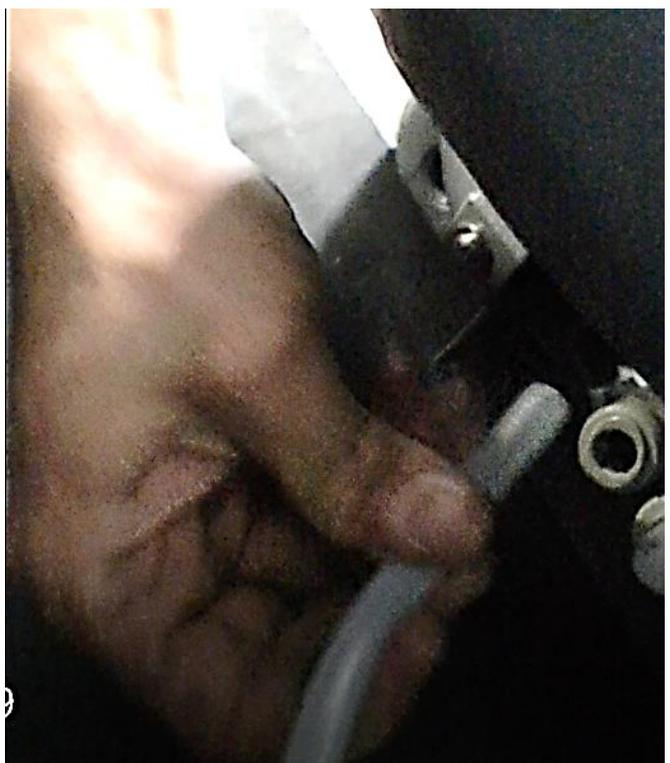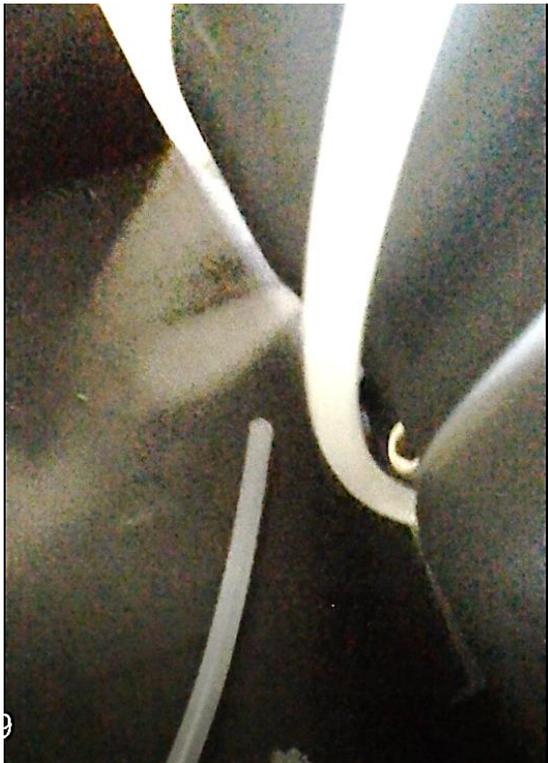


15) Now put the 2nd slimmate against the back plate. Feed the black hose into the tank further while doing this, to make sure it's all the way inside the tank. Put the basin back on when done.

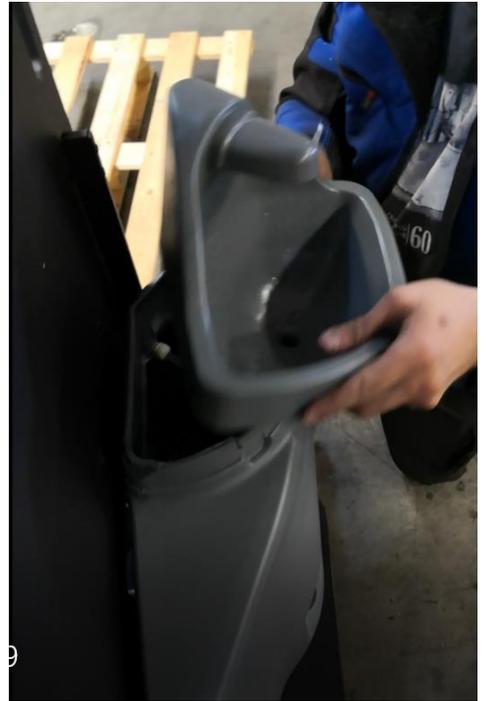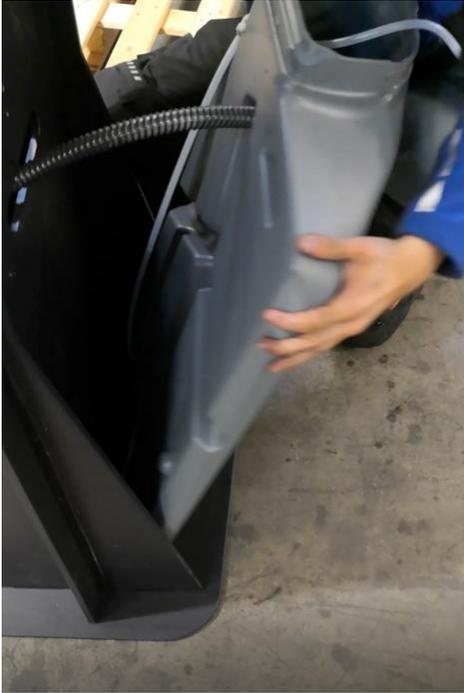

16) Now fix the 2 slimmates to each other, through the back plate using the M5 screw 22320 and nyloc nut 20903. Use a 3/16 ID washer 11361 on each side. Tighten the nut well.



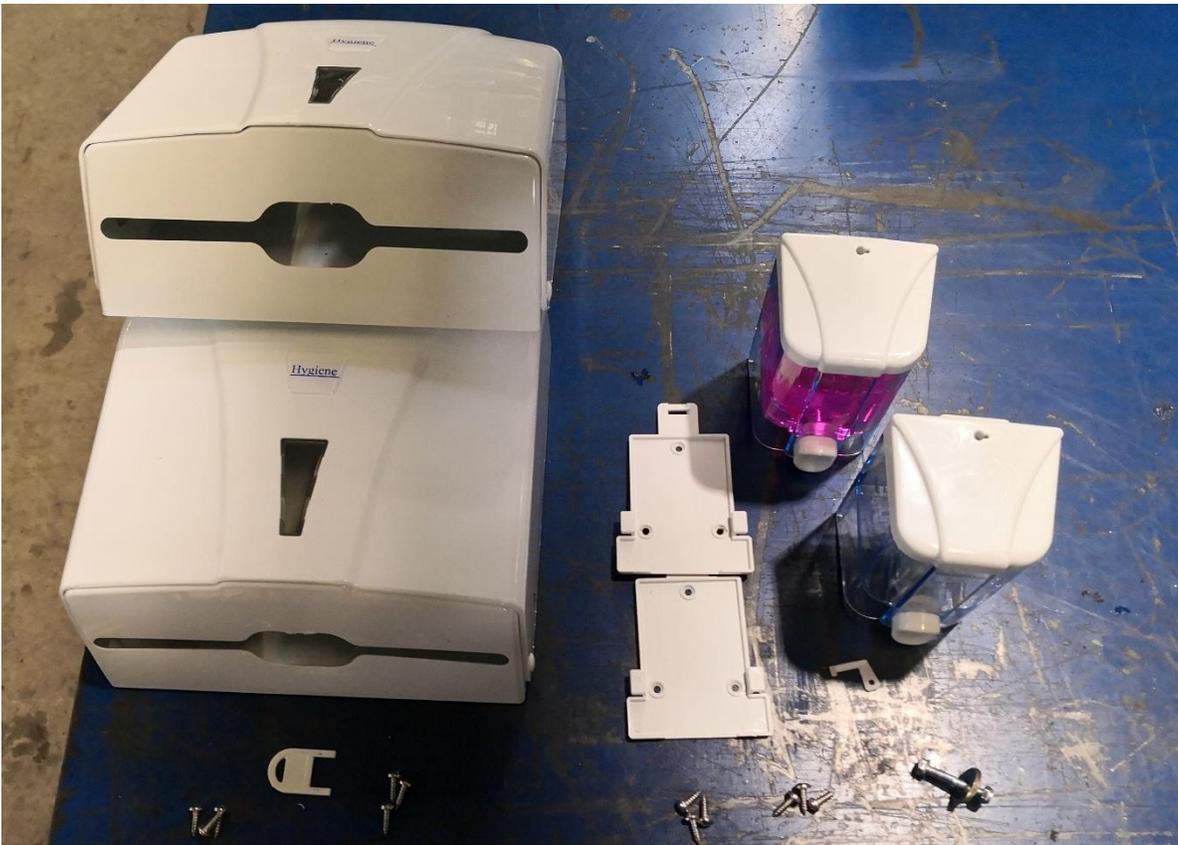

16) Now fix one soap and one towel dispenser onto each side of the structure using 3 screws 19978 for each. Put the towel dispenser high enough so you can comfortably pull paper towels out when using the AquaTwin.



Satellite Industries - 67 Avenue De La Toison D'Or - 1060 Brussels/Belgium
www.satelliteindustries.com